

P226

型號
AAKACZ030
AAKACZ032
操作說明書

MODEL AAKACZ030 OR AAKACZ032
INSTRUCTION MANUAL



PISTOL



KWC® KIEN WELL TOY INDUSTRIAL CO., LTD
www.kwcgun.com

台南市仁德區義林路168巷89號
NO.89, LN. 168, YILIN RD.,
RENDE DIST., TAINAN CITY
71752, TAIWAN (R.O.C.)
TEL: +886-6-2798175
FAX: +886-6-2798176
sales@kwcgun.com
www.kwcgun.com

低動能遊戲用槍AAKACZ03系列

1.安全裝置：保險作用為防止誤扣扳機時而不至於擊發

 
- ★請參考右邊圖片，為本型號保險開關使用方法。
- ★請務必聽到切換時保險開關的聲音，以確定保險是處於安全而正確的位置。



保險開啓，不可擊發

2.裝彈方法：請使用 KWC® 指定的BB彈

- ★壓下彈匣卡筭後便可抽出彈匣

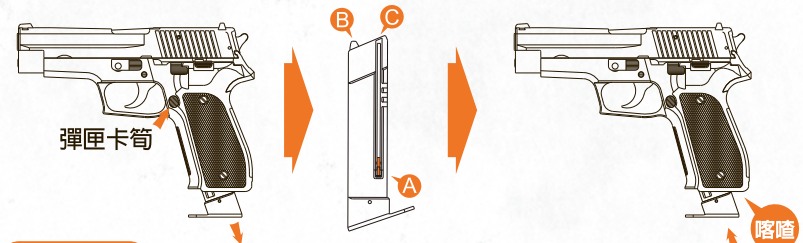

▲注意

- A. 本公司為了提高此空氣槍的命中率起見，槍身採用非常精密的槍管。
- B. 請勿使用非本公司指定及品質粗糙的BB彈射擊。因為這些都是造成卡彈及其他種類故障的原因，請注意若強行使用而導致故障發生時，本公司將不負責一切的修理。

- A. 將滑粒壓到底端並使其固定住。
 - B. 壓下子彈卡筭，以便裝填子彈。
 - C. 將BB彈裝入(最多12發)。
- ★將彈匣插入，直到聽到“喀嗒”聲響後才停止。

3.射擊操作：

- A. 將保險推到“射擊時”狀態。
- B. 將上蓋往後拉到底，聽到“喀嗒”聲響。
- C. 確認上蓋是否確實彈回原位。(若上蓋未完成回到原來位置而扣引扳機的話，槍身內部活塞將會損壞)
- D. 扣引扳機後BB彈被發射出去。
- E. 若不再繼續發射時，將保險推到“不射擊時”狀態。



▲注意

- A. 保管時請將彈匣抽出，並指向安全的方向射擊，務必確定槍中已無BB彈殘留才行。
- B. 彈匣移除後，並將保險推到“不射擊時”狀態，保管在小孩子無法拿得到的安全場所。
- C. 請勿將槍在待擊發狀態下做長時間的放置或保管。(此將是發射彈簧性能低下的原因)

▲WARNING 請務必嚴格遵守 使用操作說明書

此低動能遊戲用槍是針對喜愛射擊運動的消費者所開發。避免因使用方法不正確或改造所發生的故障或事故，請務必詳讀說明書，正確的操作享受愉快的射擊運動。

- 除了發射時外，不要將手指頭掛在板機上。
- 選擇安全與適當標靶
- 在非使用期間，請保持保險關閉且退彈的狀態，就算在非使用狀態，也要如同其已裝彈。
- 如任何的機械產品，槍的保險也可能失效。即使在保險關閉的狀態下也請小心的操作此槍，請勿將槍口對人。
- 千萬不要對堅硬或平坦表面、水面射擊，以避免跳彈。
- 請妥善保管產品在未成年孩童無法伸手取得的場所。
- 每次使用前後都應該檢查擋彈物，假如擋彈物表面有磨損失效或是反彈時請停止使用。
- 請使用高品質BB彈，請勿使用①口徑大於6mm②表面不平滑的③重複使用過的BB彈④非本說明書指名的發射物。
- 檢查任何掉落之槍枝，以確保未影響其功能。

★使用玩具槍前，請務必戴上保護眼鏡或面罩。



 
★使用玩具槍前，請務必詳讀說明書內容。



★請不要在公開場合使用玩具槍，也請不要拿玩具槍對準人或動物。



★請確認後再發射BB彈方向，附近無人或動物存在。

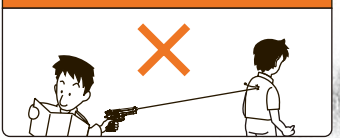

★不可攜帶玩具槍在公共場所行走，請務必裝在袋子或盒子內。



★請不要由槍口向內探視。



★不可任意改造或加工玩具槍，私自改造加工會造成產品損壞、保固失效，導致使用上不安全，甚至觸法送辦。




AAKACZ03 系列零件表

圖號	零件名稱	圖號	零件名稱	圖號	零件名稱
P05	槍管接筒	P142	扳機連桿右	S22	扳機扭簧
P06	氣缸卡榫	P143	擊鐵箱左		
P07	接筒卡榫	P144	擊鐵箱右	E01	螺絲2.3x6
P09	活塞	P145	槍柄左	E09	螺絲2.3x10
P10	彈簧支座	P146	槍柄右	E10	彈匣配重
P24	活塞卡榫	P147	導桿	E22	螺絲3.0x4
P50	子彈卡榫			E23	槍身配重
P51	彈匣滑粒	Z01	活塞固定座	E24	彈匣卡筭定位片
P52	彈匣左				
P53	彈匣右	B06	槍管	U1	彈匣組件
P56	氣缸	B22	扳機連桿後軸		
P100	紅鼻頭				
P112	擊鐵連動片	R01	活塞迫緊		
P130	槍身本體	R02	子彈迫緊		
P131	彈匣卡筭				
P132	彈匣底座	F02	平頭軸(氣缸)		
P133	槍身上蓋	F03	軸(擊鐵)		
P134	上蓋後罩	F04	軸(擊鐵箱)		
P135	槍管導管	F17	軸(扳機)		
P136	保險桿				
P137	保險片	S03	活塞卡榫扭簧		
P138	上蓋定位片	S04	活塞壓簧		
P139	擊鐵	S05	擊鐵扭簧		
P140	扳機	S14	槍管導管壓簧		
P141	扳機連桿左	S21	彈匣卡榫壓簧		

FOR PRIMARY AIRSOFT SPRING GUN SERIES


1. OPERATING THE TRIGGER SAFETY DEVICE:

 - ★ Please refer to right side photo for safety switch operation.
- ★ Make sure to hear the click when switching safety on and off to ensure the safety is in proper position.

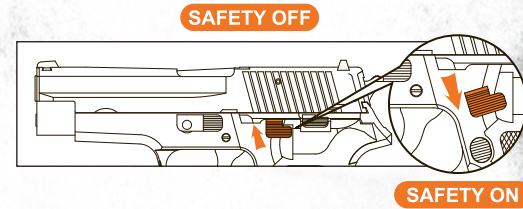

2. LOADING BB: Please use **KWC** granted 6mm BB with this airsoft.

 - ★ Press magazine release catch to remove magazine.

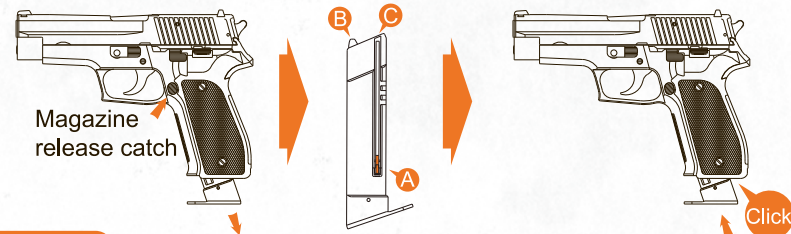

CAUTION

 
- As our design effort to produce the most accurate airsoft, we utilize precision aluminum or copper inner barrel.
- Only use high quality KWC bbs to ensure safe and trouble free operation. The manufacture and its distribution will not be held liable for any incidental or consiquential damages or injuries caused by users using incorrect / improper bbs.

- Pull the magazine follower down and lock it in place by pushing the follower knob over the stopper.
- Press the bb catch lever down and hold it down to load bb.
- Load BB into the magazine. Forcing extra BB into the magazine could damage the follower and the airsoft.

- ★ Firmly re-insert the loaded magazine back into the grip. You will hear a "Click" indicating the magazine is securely locked in place.

3. COCKING AND SHOOTING:

- Switch safety off.
- Pull the slide back until you hear a "Click" indication the shot is locked and ready.
- Make sure that the slide has returned backed to its original position before pulling the trigger. (pulling the trigger before the slide is properly seated will cause internal damage to the air soft gun).
- Pull the trigger to shoot.
- Repeat step B for next shot.
- At the end of use, switch the safety on and remove the magazine.

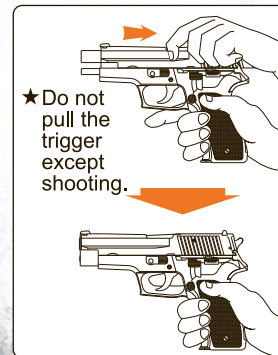

CAUTION when you have finished shooting

 
- Remove the magazine. Cock and shoot the airsoft again at a safe direction 2 to 3 times to ensure no BB is left in barrel.
- Store the airsoft with magazine removed and safety on. Keep it out of reach of children.
- Keeping the gun cocked for a long period of time will weaken the piston spring which could cause malfunction.
- Please avoid dry firing, for it could cause parts deformed or damage.

WARNING READ THIS OWNER'S MANUAL COMPLETELY.


This airsoft is intended for recreational or training purposes. To prevent improper handling, modification or alteration causing malfunction or accident, please read the owner's manual carefully. Enjoy the pleasant shooting experience by proper operation.

- Do not put your finger on the trigger except shooting.
- Please choose safe and proper target.
- Please always keep the airsoft on safe and unloaded when not using.
- Like all mechanical devices, an airsoft safety can fail. Always handle the airsoft safely even when the safety is "on safe". Never point the airsoft at any people.
- Avoid ricochet. Never shoot at a hard or flat surface or at water.
- Keep the airsoft out of reach for small children.
- Your backstop should be inspected for wear before and after each use. Discontinue use of the backstop if surface shows signs of failure or ricochet.
- Only use high quality BB. Never use ① BB diameter larger than 6mm ② BB with unsmoothed surface ③ reused BB that has been fired ④ incorrect projectiles not design for this airsoft.
- Check any gun that has been dropped to ensure that its function has not been affected.

- ★ Always wear eye protection when using airsoft.

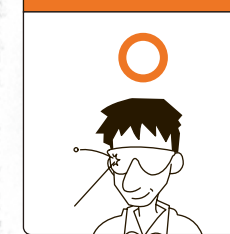

 - ★ Read the owner's manual before using the airsoft.

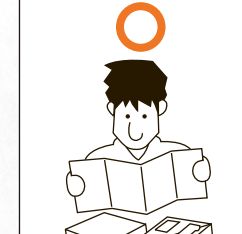


- ★ Never brandish or aiming this airsoft at any people or domestic animals. Brandish this airsoft in public is dangerous and may be a crime.



- ★ Always be aware of your surrounding before and during shooting and select a safe area for target practice.



 - ★ Always transport an airsoft in a locked carrying case. Make sure it is unloaded and on safe.

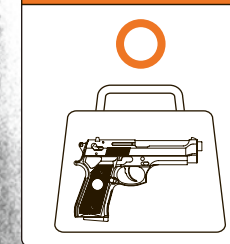

- ★ To Avoid accidental discharge, do not look directly into the barrel.




- ★ Disassemble, modify, or alter of your airsoft may cause malfunction, void your warranty and may make it unsafe to use.



AAKACZ03 SERIES PARTS LIST

NO.	UNIT	NO.	UNIT	NO.	UNIT
P05	BARREL HOLD	P142	TRIGGER BAR RIGHT	S22	TRIGGER SPRING
P06	PISTON CATCH	P143	HAMMER CASE(L)		
P07	CONNECTOR CATCH	P144	HAMMER CASE(R)	E01	SCREW2.3x6
P09	PISTON	P145	GRIP LEFT	E09	SCREW2.3x10
P10	PISTON GUIDE	P146	GRIP RIGHT	E10	MAGAZINE WEIGHT
P24	PISTON CATCH	P147	BARREL GUIDE	E22	SCREW3.0x4
P50	BB CATCH			E23	FRAME WEIGHT
P51	MAGAZINE FOLLOWER	Z01	PISTON BASE	E24	MAGAZINE CATCH PLATE
P52	MAGAZINE LEFT				
P53	MAGAZINE RIGHT	B06	BARREL	U1	MAGAZINE SET
P56	BREECH	B22	TRIGGER BAR REAR PIN		
P100	RED TIP				
P112	HAMMER CONNECTOR	R01	PISTON PACKING		
P130	FRAME	R02	RUBBER CHAMBER		
P131	MAGAZINE CATCH				
P132	MAGAZINE BASE	F02	CYLINDER PIN		
P133	SLIDE	F03	HAMMER PIN		
P134	SLIDE REAR COVER	F04	HAMMER CASE PIN		
P135	OUTER BARREL	F17	TRIGGER PIN		
P136	SAFETY LEVER				
P137	SAFETY PLATE	S03	PISTON CATCH SPRING		
P138	SLIDE STOP	S04	PISTON SPRING		
P139	HAMMER	S05	HAMMER SPRING		
P140	TRIGGER	S14	OUTER BARREL SPRING		
P141	TRIGGER BAR LEFT	S21	MAGAZINE CATCH SPRING		

 AAKACZ03 系列零件分解圖 AAKACZ03 SERIES EXPLORED VIEW

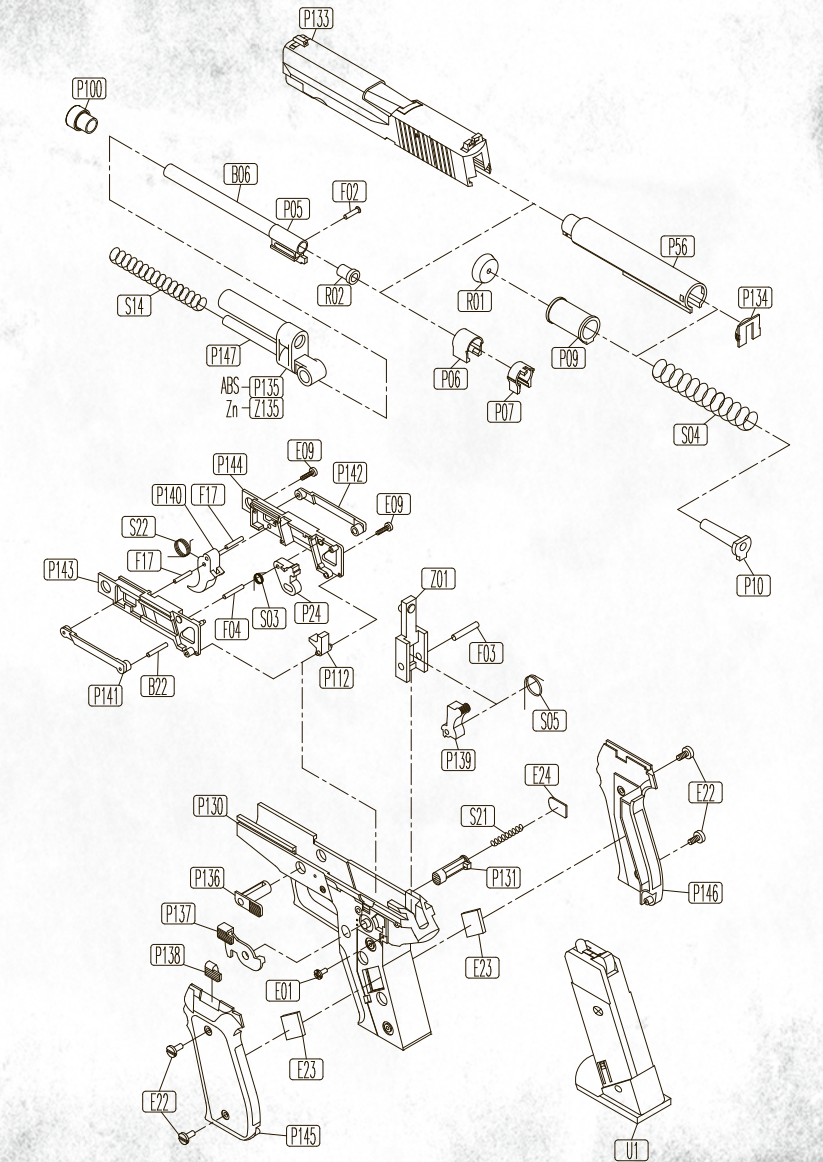

※零件有時為了改良而不經預告變更。
Spare parts may be modified for quality improvement
And such modification may be without advance notice.