

Vstup do programovacího režimu



2x otočte voličem režimu střelby z polohy SEMI do polohy AUTO. Spoušť ETU 2x zapípá na znamení, že jste vstoupili do programovacího režimu.



Nastavení režimů střelby



Krátkým stiskem spouště <2s měníte režim.

- 1x - Pouze jednotlivě
- 2x - Dvouranná dávka
- 3x - Tříranná dávka
- 4x - Čtyřranná dávka
- 5x - Pětiranná dávka
- 6x - Binární spoušť
Při každém stisku i uvolnění spouště dojde k výstřelu
- 7x - Nepřetržitá dávka



Uložení nastavení




Stiskněte spoušť na déle než 2s.

Stisknutím spouště déle než 2 sekundy vydá elektronika dlouhý tón. Programování bude ukončeno a uložen poslední režim.




Enter programming mode

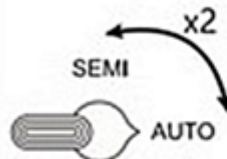

Turn the fire selector 2 times from SEMI to AUTO the ETU trigger will emit 2 BEEPS to indicate that you have entered programming mode.



Configure firing modes



Press the trigger <2s to change the firing mode.

- 1x - SEMI ONLY
- 2x - 2 RD BURST
- 3x - 3 RD BURST
- 4x - 4 RD BURST
- 5x - 5 RD BURST
- 6x - BINARY TRIGGER
A shot is fired in each time the trigger is pressed and released.
- 7x - FULL AUTO



Save settings



Press the trigger for more than 2s.

Pulling the trigger for more than 2 seconds ETU will emit a long beep. Programming will be exited and the last mode saved.

